



Dell Inspiron 1420 Keyboard Replacement

This guide will show the reader how to replace the keyboard on the Inspiron 1420.

Written By: Brandon



INTRODUCTION


This guide is to replace a broken or faulty keyboard on the Inspiron 1420 laptop.



TOOLS:

- [Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

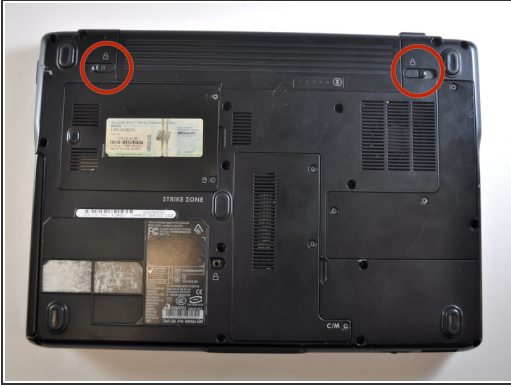


- Slide the two tabs to release the battery.
- Pull the battery out.

Step 2 — Open the laptop





- Open the lid as far back as possible.

Step 3 — Remove top cover plate

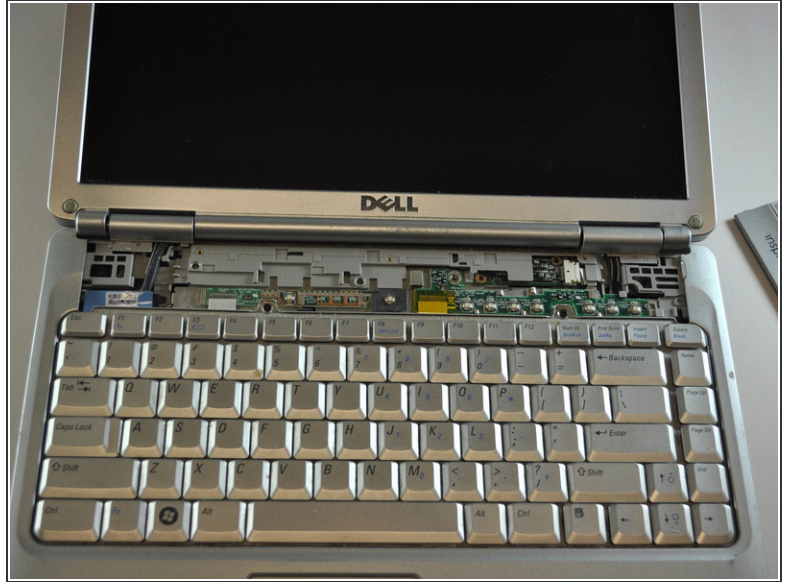

- Using a spudger, pry off the top cover plate, thus exposing the screws for the keyboard.

Step 4 — Unscrew keyboard screws

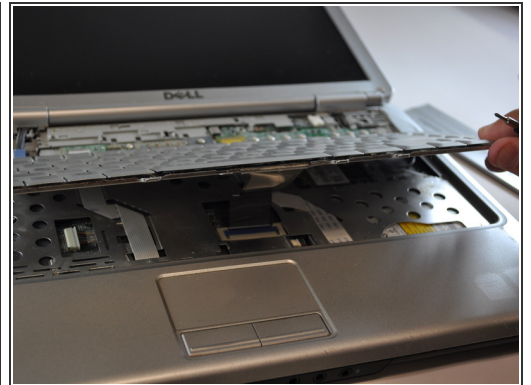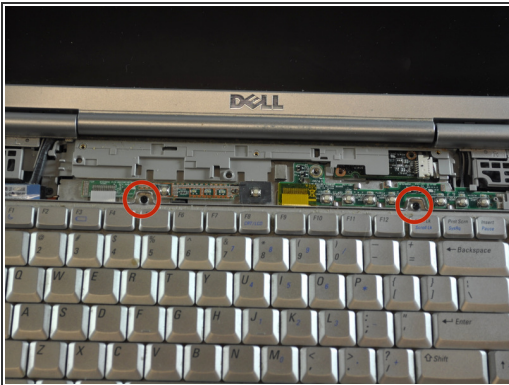

- Using a Phillips #00 screwdriver, unscrew the two 3mm screws holding the keyboard down.

⚠ When removing the keyboard, be cautious not to damage the connecting ribbon underneath.

Step 5 — Remove keyboard



- Using a spudger, carefully lift the blue tab, releasing the ribbon connector and freeing the keyboard to be removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 07:27:25 AM.